

ASCU-P90 PROMark-II
For Ver.6 P90 gearboxes.

**make it
PRO!**

3 YEARS WORLDWIDE WARRANTY

INSTALLATION AND USER MANUAL

WARNING! Please read carefully this Instruction manual before proceeding with the installation. We strongly recommend that the ASCU to be installed by an experienced airsoft technician.

ASCU PRO! AIRSOFT SMART CONTROL UNIT

The ASCU PRO is designed with focus to provide the highest durability on the field, and simplicity of install and use.

We designed the PRO with the same approach as real-steel guns are build. So no Bluetooth and smartphones here! You can't connect a real-steel M4 or AK to a USB or smartphone - they are operated only by the safety lever and the trigger, so we did the same with the ASCU-PRO! You can set any of its functions on the field without even taking your gloves off.

The ASCU PRO is the smallest unit on the market, and it packs all functions that will give you the complete realism in functionality of your AEG replica. With the PRO, we have added a smart self-calibrating Pre-Cocking function, that will automatically find the best setting for your build. Mark-II version is optimized for Brushless and classic motors.

Designed for P90 ver. 6 gearboxes.


- Single board control unit with processor and MOSFET
- Cycle detection with Active Brake- mechanical.
- Safe/Single/Full Auto. TRUE AUG trigger function.
- Pre-cocking: Self-calibrating to optimal setting for you setup.
- Extremely fast SEMI shots: 25 in 1 second.
- Safety: mechanical (provided with your AEG manufacturer)
- Short circuit protection: TSCP* (Total Short Circuit Protection)
- Maximum supply voltage: 15 V
- Max burst load: 240 A
- Battery compatibility: all DC batteries available up to 15V
- Battery connector: T-connector (new standard for airsoft)
- Wires 16 AWG with strong heat resistant PTFE insulation.


*TSCP will detect a short-circuit any time from the moment the battery is connected to the moment it is disconnected. The system checks for short-circuit: 1- on battery connection; 2- every time the trigger is pressed; 3-when motor spins. If short-circuit or overload is detected the system will immediately kill all processes and shut down the system. To reset the unit, the battery has to be disconnected and reconnected. ASCU will resume normal **function once the short-circuit is fixed.**

All ASCU boards are designed and manufactured in EU with strict quality control.

INSTALLATION STEPS

1. Remove the gearbox from your P90 replica.
2. Disconnect the wires from the motor
3. Unscrew the 2 bolts holding the trigger switch and remove it from the gearbox.

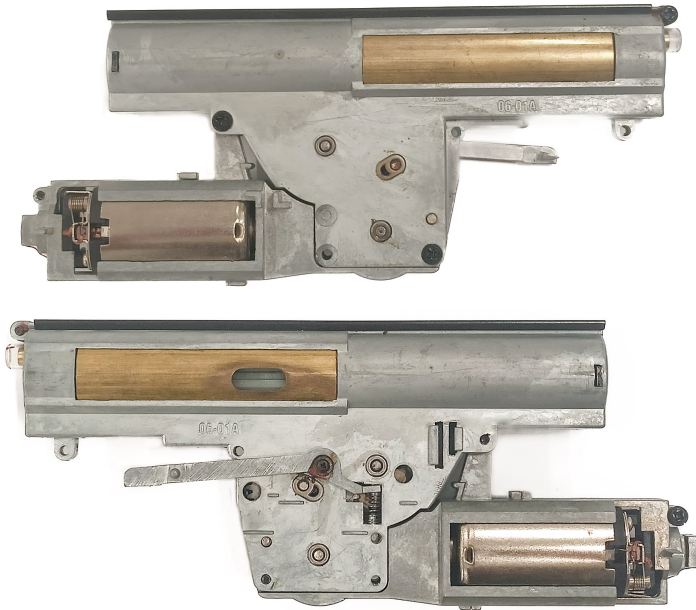


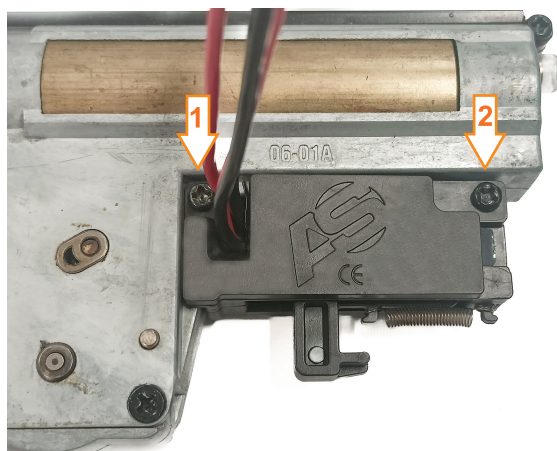

4. Using the same 2 bolts fix the ASCU at the place of the original trigger switch.




Pay attention not to damage the Cut-Off switch with the Cut-off lever!

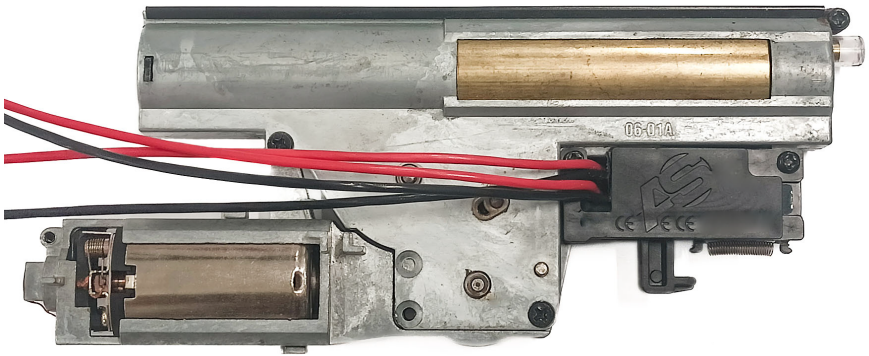

5. Connect the cables to the motor.

6. Return the gearbox back in your P90.

We recommend that the motor is orientated in a way that the (-) connector for the Black wire is on the Right side.

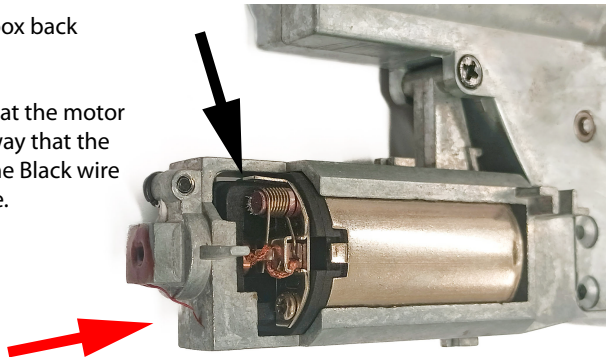

!!! Make sure you connect properly to (+) of the motor to the RED wire and the (-) of the motor to the BLACK wire.

Connect the a battery to test the functionality of the AEG.

- ▶ **Make sure motor height is optimal.**
- ▶ **Make sure the Safety works and no shot can be made when engaged.**

READ BEFORE USING YOUR AEG WITH ASCU!

ASCU audio signals:

- 1 short signal – AEG is ready for use.
- 1 long signal – Battery depleted or overload.
- 2 long signals – Short-circuit detected.

Choosing trigger mode for the Full Auto position:

1. Disconnect the battery
2. Connect the battery and pull the trigger all the way in before 1.5 seconds run out.
The ASCU will make 4 fast short beeps to confirm that it is in Program Mode
3. The ASCU will emit a sequence of short beep signals:
 - 1 beep: Standard mode: 3-rnd burst at tap and full auto on hold.
 - 2 beeps: Full Auto.
 - 3 beeps: 3 round burst.
 - 4 beeps: Semi only.
4. After you hear the desired number, pull the trigger and the mode will be selected. A beep will confirm the selection and that the AEG is now ready for use.

PRE-COCKING:

With pre-cocking function the ASCU will leave the piston and main spring pre-loaded after each shot in when SEMI is selected. When the trigger is pressed the piston will be released instantly and after the shot they will be pre-cocked for the next shot. This gives a very realistic instant trigger reaction to your AEG. Pre-cocking works only on SEMI mode, FULL AUTO remains standard.

After extensive tests we have chosen 60% Pre-Cocking to be the best setting for fast trigger response without additional stress on the motor and battery. Any higher precocking % leads to excess load and wear of your AEG components and Battery.

To activate Pre-cocking:

MAKE SURE THE GUN IS POINTED AT A SAFE DIRECTION AND THERE IS NO MAGAZINE IN AND NO BB IN THE HOP-UP CHAMBER DURING THAT PROCEDURE!

1. Disconnect the battery.
2. Connect the battery and pull the trigger before 3 seconds run out. The ASCU will make 4 fast short beeps to confirm that it is in Program Mode.
NOTE: the trigger must be pulled as for a single semi shot.
3. Make 2 shots to auto-calibrate the Pre-cocking, or just hold the trigger after battery connection.
4. After the 2 shots release the trigger and a single beep will confirm the AEG is ready for use.

To deactivate the Pre-cocking:

1. Disconnect the battery.
2. Set the fire selector lever on SEMI position.
3. Connect the battery and pull the trigger before 3 seconds run out. The ASCU will make 1 short beep.
4. Pull the trigger.
5. A single beep will confirm the pre-cocking is deactivated AEG is ready for use.

NOTE: Do not store your AEG with Pre-Cocked piston as this will soften your main spring overtime and you will lose BB energy. Make a Full auto shot before disconnecting the battery for storage or transportation in order to release the piston from its pre-cocked position.

**NEVER TRANSPORT OR STORE YOUR AEG
WITH A CONNECTED BATTERY!**

TOUBLESHOOTING

The ASCU is designed to monitor the parameters in which your AEG works in. If by any reason mechanical or electrical failure the AEG does not work within the normal parameters, the ASCU will stop it and inform you for that with a double beep signal.

Malfunction	Possible reason	What to do
When battery is connected there is no a beep signal.	Bad battery or AEG cable plug	Check the plugs.
	Bad or no connection of one of the wires with the motor	Check the motor connections with the black and red wires
	Short circuit of wires.	Check all wires. After the short-circuit is fixed the ASCU will resume normal function
When the fire selector is on "SEMI" or "AUTO" the AEG wont fire.	The trigger is not reaching the trigger switch. _____ or Broken trigger switch	Check trigger installation. _____ Send to AS service.
The AEG makes only few automatic shots and stops, no matter if the selector is on "SEMI" or on "AUTO"	The sector gear cam is not activating the cutt-off switch _____ or broken switch	Check Sector gear shimming if it is not too high. _____ Send to AS service.
The AEG stops firing with a double beep signal when the battery is charged	The motor is overtightened. _____	Regulate the motor regulating screw _____
	The gears are overtightened. _____	Check the shimming. _____
	The motor is underpowered. _____	Change it with more powerful motor. _____
	The battery is damaged. _____	Check with another charged battery. _____
	A broken or worn gear.	Change the gear.
The wires get hot during firing	Loose connection to motor or battery.	Check all wire connections.
	Bad battery.	Change the battery.
	Bad Motor.	Change the motor.

Technical support at: info@airsoftsystems.com

TEST MODE:

This version of ASCU has a test mode which can be used to diagnose if all of its components are working or there is a damaged component.

Can be used to check the Sector Gear to Cutt-off switch engagement during installation.

To enter in this mode you must have access to the Cutt-Off Switch on the ASCU:

To eneter in Test Mode:

1. Connect the wires to the motor. (hold the motor tight in hand to prevent jumping on rotation).
2. Now connect the battery. You have 3 seconds in which time you have to push the cut-off sensor once. If you do this properly (and cut-off sensor works), you must hear a 2 short beeps.

Now ASCU is in test mode and you can test its components:

- Push cut-off switch , you have to hear beep while holding; (no beep means that switch is not working)
- On the back of the ECU board you will find the fire-selector switch. Push the selector switch, you have to hear a beep. (no buzz sound means the switch is not working)
- Press the trigger switch, the motor will start spinning untill the trigger switch is released (no motor spinning means that trigger switch is not working).

To exit of test mode just disconnect battery.If you detect a problem with your ASCU please contact Airsoft Systems Support at support@airsoftsystems.com

WARRANTY

The ASCU has a 36 months warranty for product defects from the date of the purchase. All ASCU with production defect will be replaced by Airsoft Systems.

Keep your invoice with as a proof of date of purchase.

WARRANTY VOID IF the ASCU is modified by the user, or any of its parts are damaged due to improper use or bad installation.

RETURN AND REPLACEMENT:

All defective units must be returned to Airsoft Systems or their distributor together with the purchase invoice:

Replacement units will be returned within 45 days from the date they are received in Airsoft Systems factory.

Airsoft Systems does not take any responsibility for delays and losses due to the post or courier services. Shipping back replacement units by mail / post service without insurance is free of charge. Shipping back replacement units by courier express service with insurance will be charged.

factory address:

AIRSOFT SYSTEMS LTD.

4 Iliensko Shose

1220 Sofia

Bulgaria



DISCLAIMER:

Manufacturer / distributor assumes no liability or responsibility of any injury, damage of any type, third party liability, diminished value or any other type of claim raised by the user, their collaterals, assigns and or agents of this product. By using this product the user accepts all personal and legal liability of any type listed under the UCC and all state regulatory agencies where applicable.

**This Product is manufactured in Bulgaria (EU)
by Airsoft Systems Ltd.**

4 Iliensko Shose
1220 Sofia
Bulgaria
e-mail: Info@airsoftsystems.com

